

PoE

Habilitar/Deshabilitar PoE en todos los interfaces

```
set poe interface all enable/disable
```

Habilitar/Deshabilitar PoE en un interfaz específico

```
set poe interface ge-0/0/0 enable/disable
```

From:

<http://wiki.intrusos.info/> - LCWIKI

Permanent link:

<http://wiki.intrusos.info/doku.php?id=red:switch:juniper:poe&rev=1452855378>

Last update: **2023/01/18 14:38**

