

# PoE

## Habilitar/Deshabilitar PoE en todos los interfaces

```
set poe interface all enable/disable
```

## Habilitar/Deshabilitar PoE en un interfaz específico

```
set poe interface ge-0/0/0 enable/disable
```

From:

<http://wiki.intrusos.info/> - LCWIKI

Permanent link:

<http://wiki.intrusos.info/doku.php?id=red:switch:juniper:poe>

Last update: **182023/01/ 13:45**

